

Installation of CorrectDeck® Fascia




The CorrectDeck® fascia trim board is an attractive finishing element to any deck. Fascia trim boards may be applied to outer rim joists or stair stringers. It eliminates the need to paint or stain construction grade lumber because it matches CorrectDeck® colors and features a high definition wood grain.



INSTALLATION INSTRUCTIONS

CorrectDeck® fascia trim board should be applied directly to the wood substrate and may be installed either horizontally or vertically. When covering joists, no more than 1" of fascia overhang should extend below the joist. Leave at least 1/8" end gap per 12' length and at the intersection of posts or other structures. To avoid potential problems caused by expansion & contraction of the wood substrate, fascia should be attached directly to rim joists with 1 1/2" stainless steel, trim head screws. These should be placed vertically 1" from top and bottom and one in center (three screws vertically) every 12" on center.

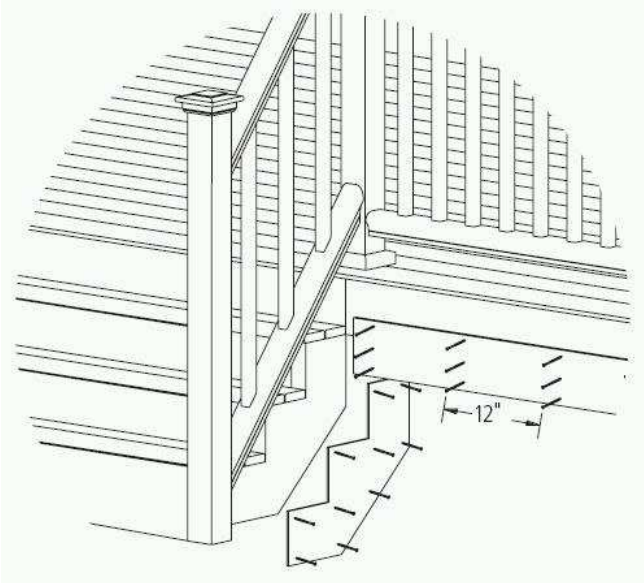

- ◆ Fascia trim board should **not** be used for wrapping deck posts.
- ◆ Fascia trim board should **not** be used to cover stair risers unless a solid wood substrate is used as a support.
- ◆ Fascia trim board should **not** be used in flat surface applications, and should **not** be installed over a wear surface of an existing wood deck surface.
- ◆ Extending the top of the fascia trim board beyond the top of the outer rim joist so as to cover the edges of the deck boards is **not** recommended.

Note: Wood expands and contracts in width with changes in temperature and humidity. CorrectDeck expands and contracts slightly in length with changes in temperature. Inappropriate installation of CorrectDeck fascia trim boards may result in bowed boards, snapped fasteners, or both.

GAF Decking Systems, LLC
8 Morin Street
Biddeford, Maine 04005

877.DECK.877
207-284-5600
207-284-1001 (fax)

www.correctdeck.com